


BSCW-61

**Spading Closing Wheel for White 6000 series
planters**

Installation Instructions

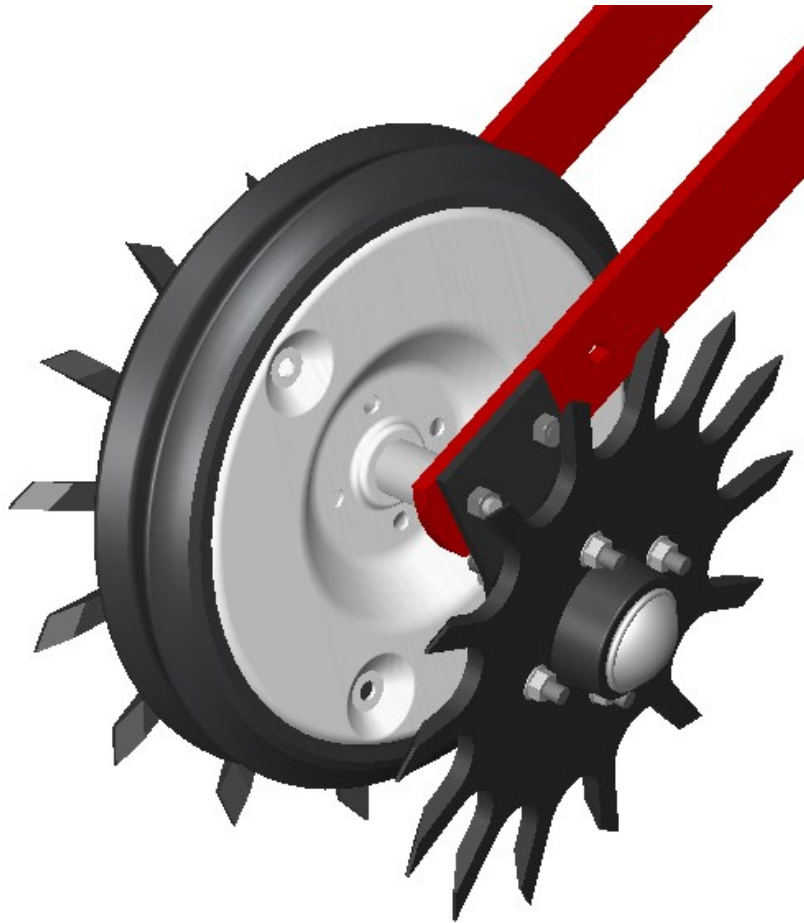

Martin Planter Attachments

Martin Industries LLC

206 Elk Fork Road

Elkton, KY 42220

Telephone: 270-265-5817

E-Mail: martin@martintill.com

www.martintill.com



Installation Instructions for BSCW61

- 1) Use the 1/2" x 1 1/4" machine bolt, lock washer and nut to install the rectangular spacer plate beneath the cross member of the closing wheel H-frame using existing hole above the spring adjusting bolt.
- 2) Remove the closing wheel.
- 3) Using the 3/8" x 1" carriage bolts and lock nuts provided, install the angled support brackets with the pointed corners forward and the top of the brackets parallel to the top of the closing wheel H-frame arm. The angled part of the support brackets will be pointing towards the furrow. **(Note: Support brackets are right and left and are not interchangeable)**. Using the bolt holding the closing wheel for rear hole in bracket and 3/8" x 1" carriage bolt in front hole.
- 4) With the 5/8" x 4" bolts, spacers and lock nuts provided, mount the hubs to the angled support bracket. The long part of the hub should face away from the furrow. Install 5/8" lock nut on the furrow side of the support brackets.
- 5) Install the wheel marked TW3813-L4 on the right side with the part number facing the furrow. Wheel bolt should be inserted through the hub first and then the wheel.
- 6) Repeat for the left side using the wheel marked TW3813-R4.

Note :

- **Left and right is referenced from behind the machine facing the direction of travel.**
- **Will not work with recessed H Bracket.**

