


## Stop Blocks Kit for CleanSweep

This Stop Block Kit is to be installed on any planter where extra clearance is needed to prevent row cleaners from raising too high with CleanSweep™ installed. See CleanSweep™ Compatibility Guide to determine whether or not you need the Stop Block Kit.

### Parts List

1. Right Stop Arm (1)
2. Left Stop Arm (1)
3. 5/16 x 1" Bolt (2)
4. 5/16 Nut (2)
5. 5/16 x 3.5" Bolt (1)
6. 5/16 x 1.75" Bolt (1)

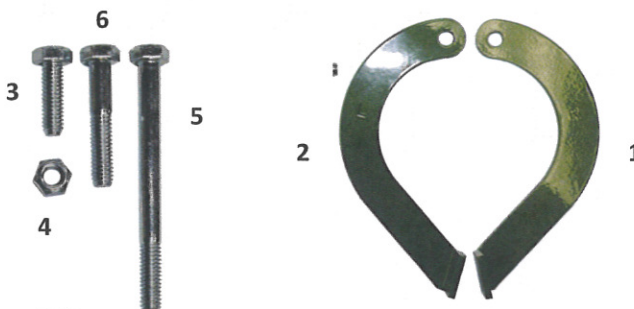



Step 1

Locate this hole on your planter and install the left stop arm. Then on the other side of the row unit install the right stop arm.

Use the 1" bolt in most cases to secure the stop block to the row unit.

The 1.75" bolt has been provided for cases where a RUM has been installed on that row unit.

The 3.5" bolt has been provided for cases where a Kinze Air Force Lift bracket has been installed on the row unit.

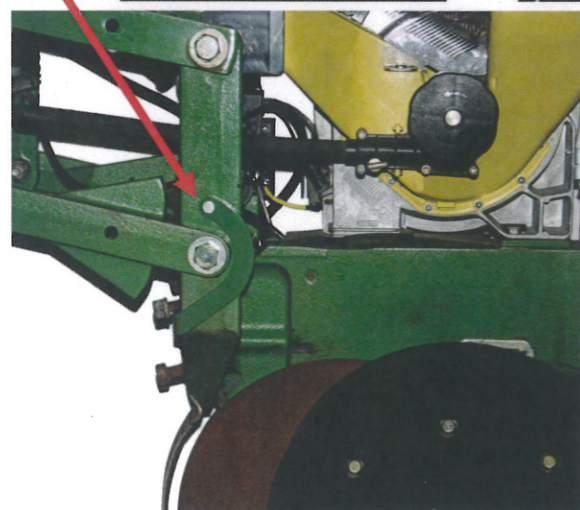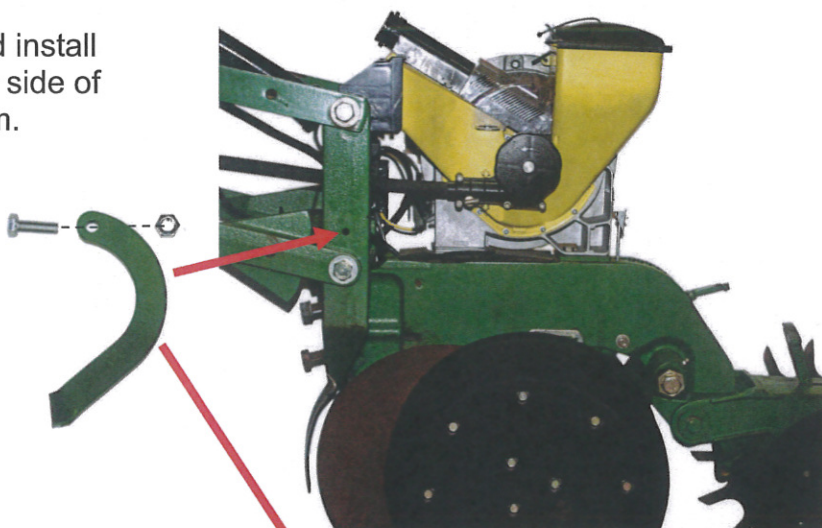

**Note:** Stops are not needed if row mounted coulters or row cleaners already create a stop by extending their mounting bracket out between the face plate and parallel arm stop.

Questions? Check the website: [www.precisionplanting.com](http://www.precisionplanting.com) or call us at 309-925-5050.

**Precision**  
PLANTING