



Stop Kit for 1790 planters

The Stop Kit is for JD 1790 planter with configurations 12/23, 12/24, 16/31, 16/32, with short parallel arms on the 30" rows. The Stop Kit limits over extension of the parallel arms to prevent damage to the D-tube.

Parts List

1. Right Stop Arm (4)
2. Left Stop Arm (4)
3. 5/16 x 1" Bolt (8)
4. 5/16 Nut (8)





Step 1 Locate this hole on your planter and install the left stop arm. Then on the other side of the row unit install the right stop arm.

On 12 row planters install on rows:
2, 3, 10 & 11 of the corn rows.

On 16 row planters install on rows:
4, 5, 12 ,13 of the corn rows.

By using the stops on the above mentioned rows, you are protecting the rows furthest from the wheels. These rows are the most susceptible to raising too high when going over terraces or extremely uneven ground.

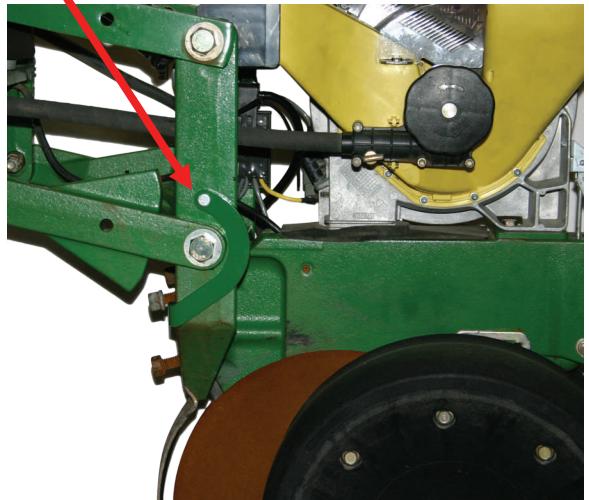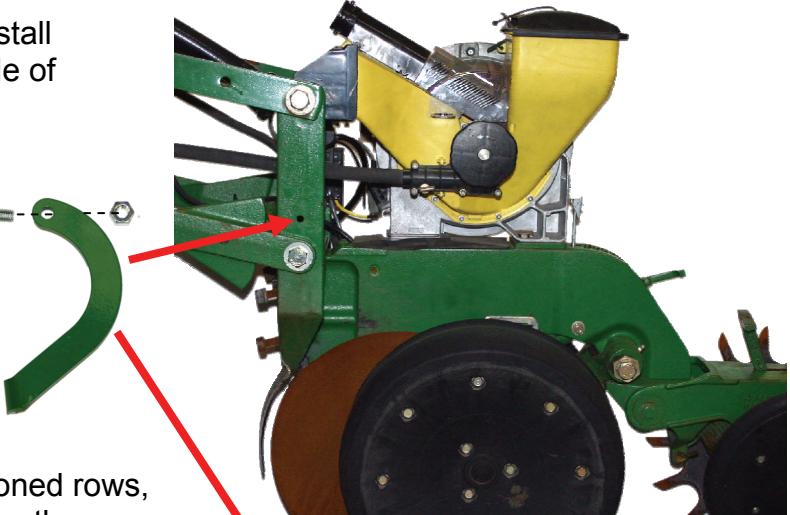

Note: Stops are not needed if row mounted coulters or row cleaners already create a stop by extending their mounting bracket out between the face plate and parallel arm stop.

Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.