
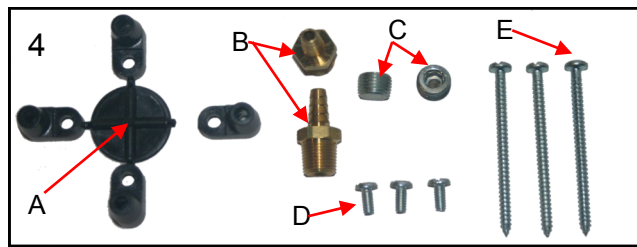


# 30" Vacuum Pressure Gauge Installation Instructions

## Parts List


1. 30" Pressure Gage (730139)
2. Vent Filter (720261), (1)
3. 90 DEG Elbow fitting (730227), (1)
4. Hardware Pack (1)
  - (A) Length Adapters (4)
  - (B) Hose Barbs (2)
  - (C) Port Plugs (2)
  - (D) Surface Screws (3)

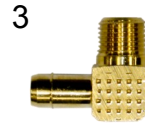

**Step 1** For vacuum pressure reading, connect tubing to the Low Pressure Port on the lower part of the gage. Place a port plug (C) in the unused low pressure port.

**Step 2** Place the Vent Filter (3) in the High Pressure Port on the top part of gage. Plug the unused high pressure port with port plug (C).

**Note:** How you have your gage mounted will determine if you connect to the port on the back or on the side of gage.

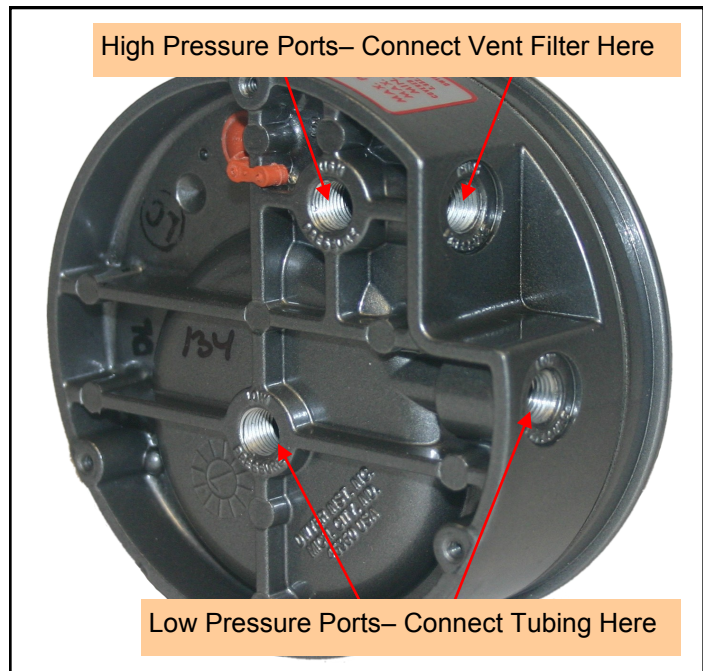

Questions? Check the website: [www.precisionplanting.com](http://www.precisionplanting.com) or call us at 309-925-5050.

